


Using the LCD5511 Keypad

WARNING: Please refer to the System Instruction Manual for information on limitations regarding product use and function and information on the limitations as to liability of the manufacturer.

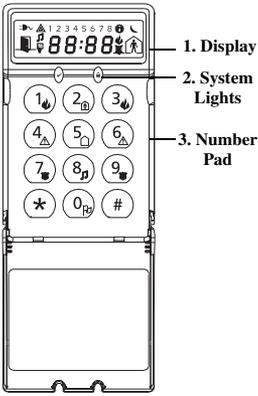

The LCD5511 shows the status of your security system using an LCD display, along with fixed symbols and numbers.

This instruction sheet describes the basic features of the keypad. For more detailed information on your security system

and how to use it, please read your system's Instruction Manual. Test system weekly and have any system trouble conditions corrected by your alarm installer.

1. Display



- AC is present
- Alarm(s) in memory
- Fire alarm(s) in memory
- System armed Night mode
- System armed in Away mode
- System armed in Stay mode
- Zone(s) open
- Zone(s) bypassed
- System Trouble
- Door Chime
- Programming in progress
- 1 2 3 4 5 6 7 8
Trouble display

2. System Lights

Ready Light (Green)

If the Ready light is ON, the system is ready for arming. The system cannot be armed unless the Ready light is ON.

Armed Light (Red)

If the Armed light is ON, the system has been armed successfully.

3. Number Pad

Use the number pad to enter your code, and to access system functions. To exit a function and return to the Ready state, press . To select a function press .

4. Emergency Keys

Press and hold both keys simultaneously for 2 seconds to send the following messages:	
1 3	Fire Message
4 6	Auxiliary Message
7 9	Panic Message

NOTE: *(All Keypads) The Fire, Auxiliary and Panic keys will NOT function unless programmed by the installer. If these keys are in service and the installer has enabled audible feedback, holding down the key for two seconds will cause the keypad sounder to beep indicating that the input has been accepted and sent.

5. Function Buttons (

If your installer has enabled them, you can use the function buttons to access the Stay arm, Away arm, Door Chime features (your installer may program other functions for these buttons). Press and hold the appropriate button for two seconds. Refer to your Installation Manual for more information on these features.

Using the LCD5511 Keypad

The LCD5511 works similarly to the other keypads described in your system's Instruction Manual. For more information on individual functions, see your system's Instruction Manual.

Viewing Open Zones

Before you can arm your system, all the zones must be closed. If some zones are currently open, the keypad will display , and the Ready light will be off. To see the numbers of the open zones, press . Before you try to arm your system, go to the open zones and close all doors and windows, and make sure no one is present in zones with motion detectors.

Viewing Zones in Alarm Memory

If there is an alarm on your system the keypad will display and will scroll the numbers of the zones affected. To view zones in memory, press .

System Functions - Quick Reference

The following chart lists the basic functions of your system and the keys to press for each function.

NOTE: Some functions may not be available on your system. Ask your installer for more information.

To do this:	Press this:
Arm system (Away):	[access code], leave through entry/exit door OR press 5 and hold for 2 seconds (if enabled)
Arm system (Quick):	* 0 (from Ready state)
Arm system (Stay):	[Access Code], do not exit premises OR press 2 and hold for 2 seconds (if enabled)
Arm system (No Entry Delay):	* 9 [Access Code]
Bypass zones:	* 1 [2-digit zone number(s)], # to exit
Disarm system:	[Access Code]
Exit premises when system armed:	* 0
Reset smoke detectors:	* 7 2
Program access codes:	Refer to "Programming Access Codes" in the Instruction Manual
Send Fire message:	1 3 (press and hold both keys simultaneously for 2 seconds)
Send Auxiliary message:	4 6 (press and hold both keys simultaneously for 2 seconds)
Send Panic message:	7 9 (press and hold both keys simultaneously for 2 seconds)
Set system time and date:	* 6 [Master Code] 1 , enter current time (24-hr format: 00:00-23:59) and date (month/day/year) as 10 digits: [hh:mm MMDDYY]
Silence alarm:	[Access Code]
Turn auto-arm on/off:	* 6 [master code] 2
Turn door chime on/off:	* 4 to toggle on or off OR press 8 for 2 seconds (if enabled)
Turn on bypassed zones (if Stay armed):	* 1
View alarm memory:	* 3
View troubles:	* 2 (Troubles indicated by numbers 1-8 on top of keypad display. See 'Viewing Trouble Conditions' in Instruction Manual for list of trouble definitions)