


Installation Instructions

The following instructions are a quick reference guide for the LED remote unit; refer to the control panel installation manual unit connection and operation instructions.

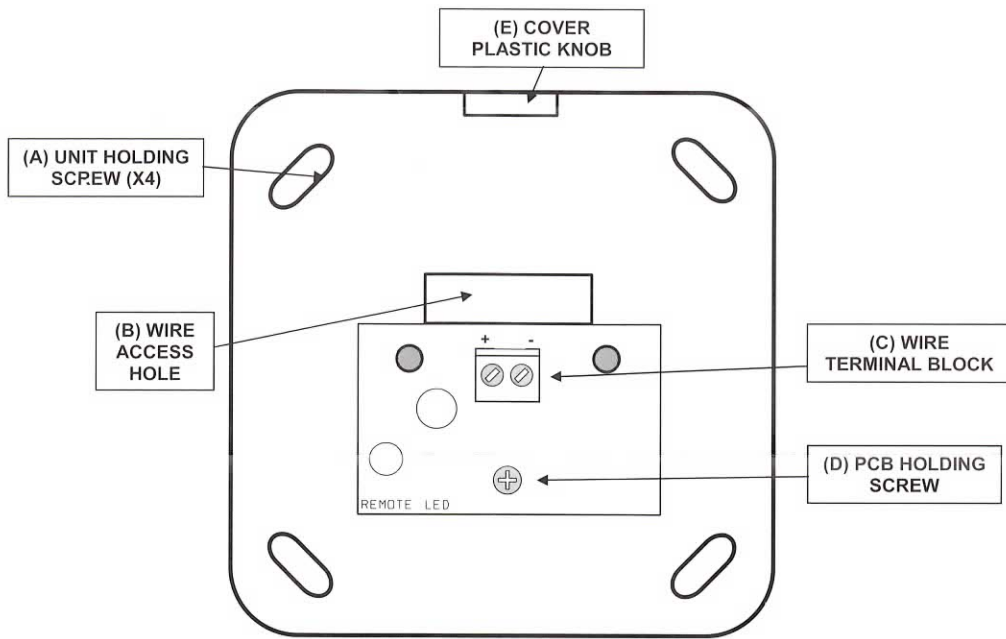

- The unit can be mounted on any flat surface like ceiling or wall, using the holes marked A
- To remove the front cover, press on plastic knob at the top of the unit (E).
- Run the wire through the wire access hole (B) and connect to the terminal block (C)
- Keep the polarity as marked on the PCB.
- Remote LED indicator is intended to be connected to limited power source meeting the requirements of sub-clause 2.5 of EN60950-1.

Specifications

Operating Temperature -10° to 50°C Indoor Use Only

P/N 7121729 Rev. A